

# DS9208


## Quick Start Guide




<http://www.motorola.com/ds9208>

See Product Reference Guide for detailed information


### CORD ATTACHMENT

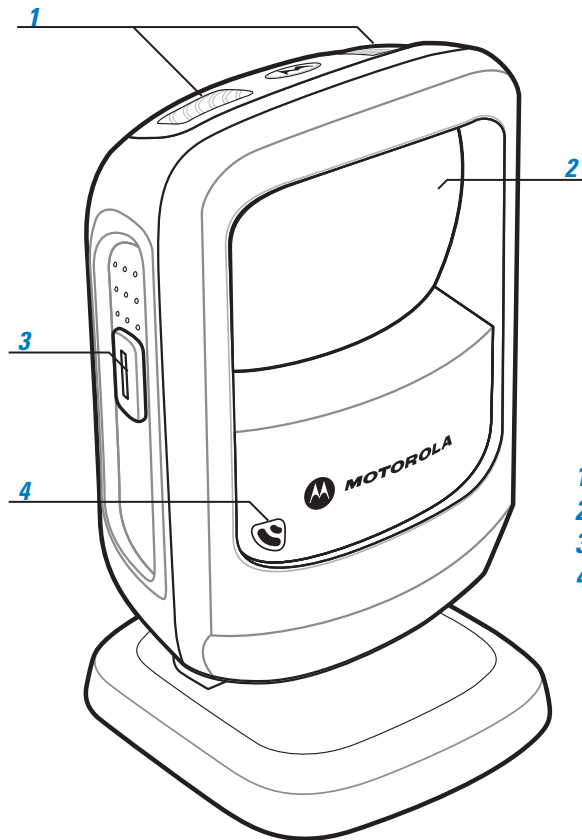


- 1 LED Indicators
- 2 Scan Window
- 3 Scan Trigger
- 4 Beeper

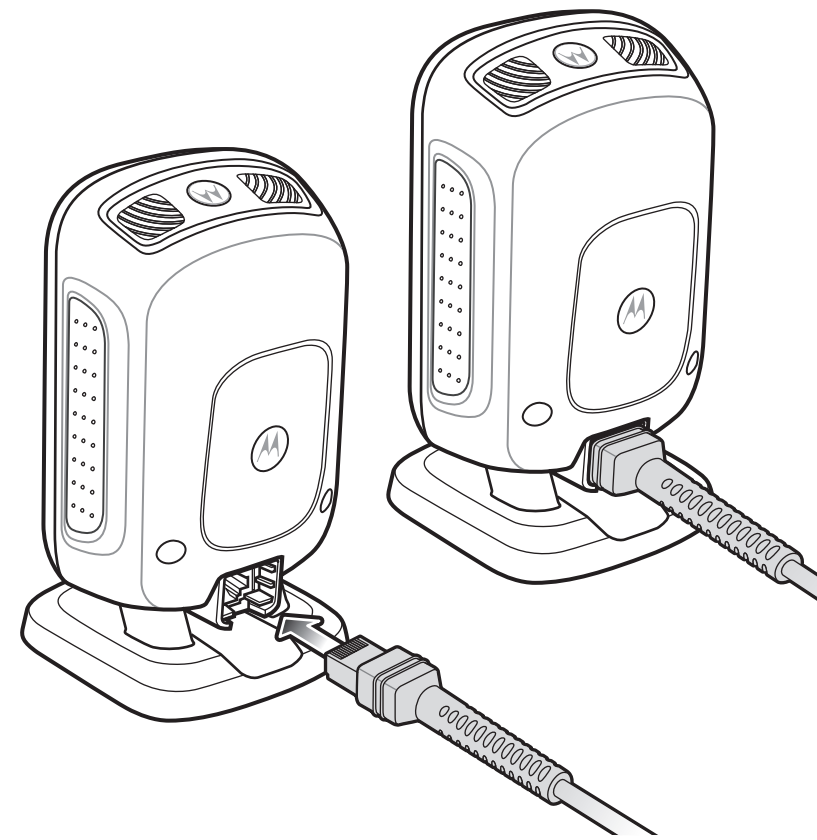

### WALL MOUNTING

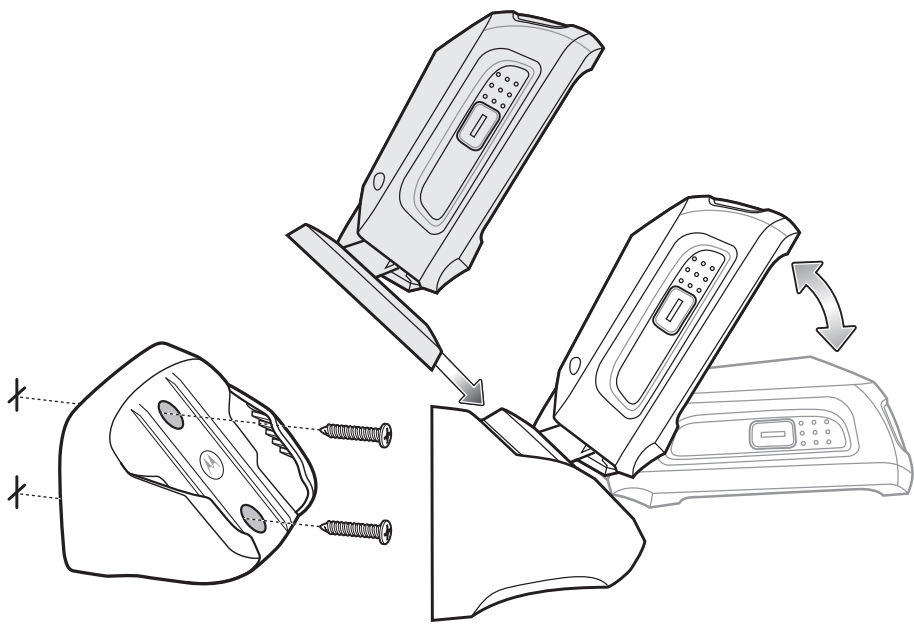


### TABLE TOP MOUNTING

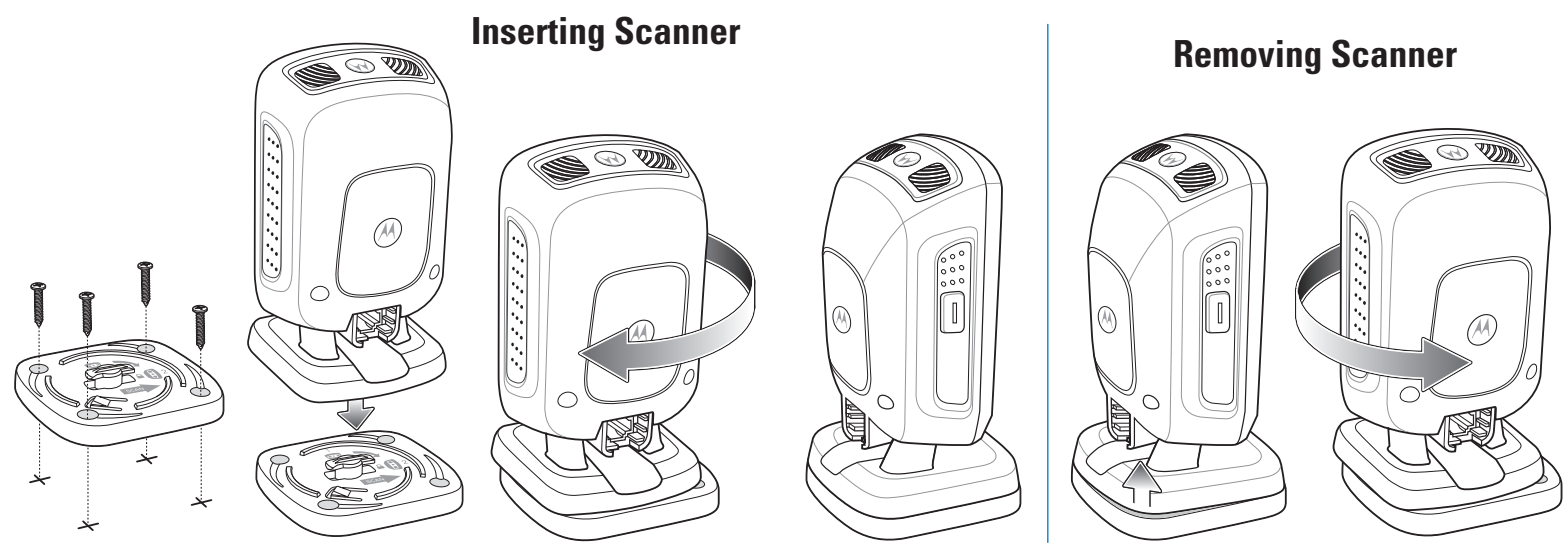


### HOST INTERFACES

NOTE: Cables may vary depending on configuration


#### RS-232

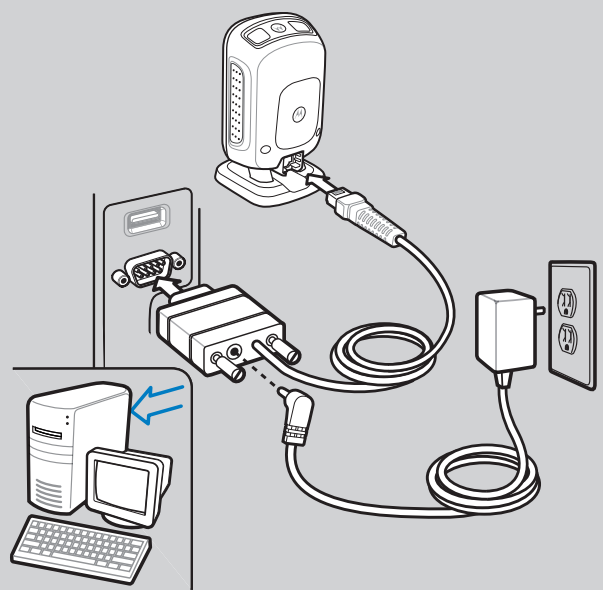

#### USB

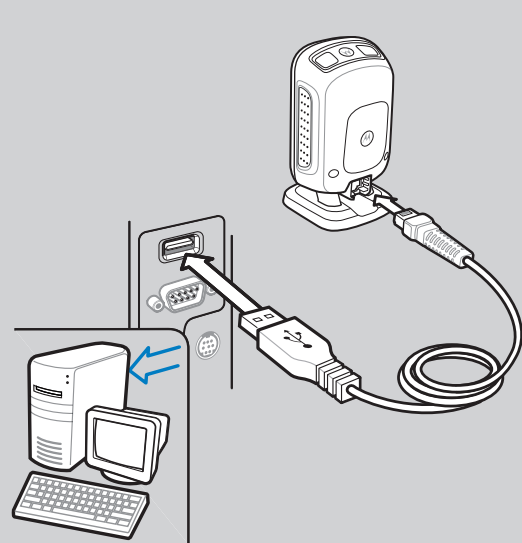


#### Keyboard Wedge

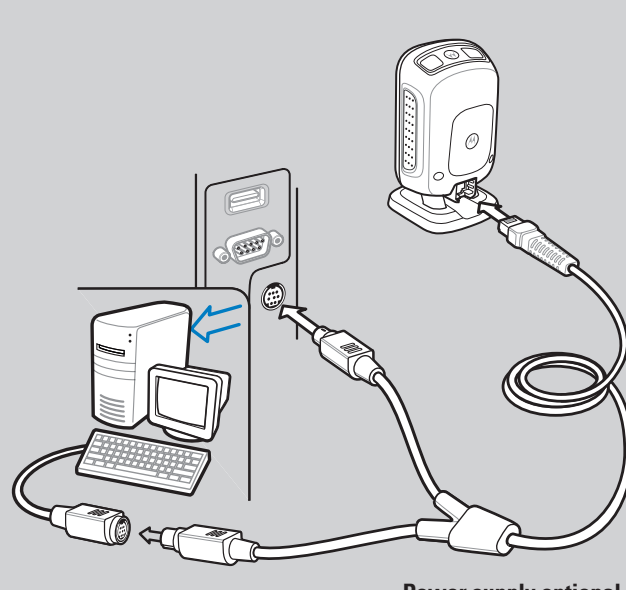

Power supply optional

#### IBM 46XX

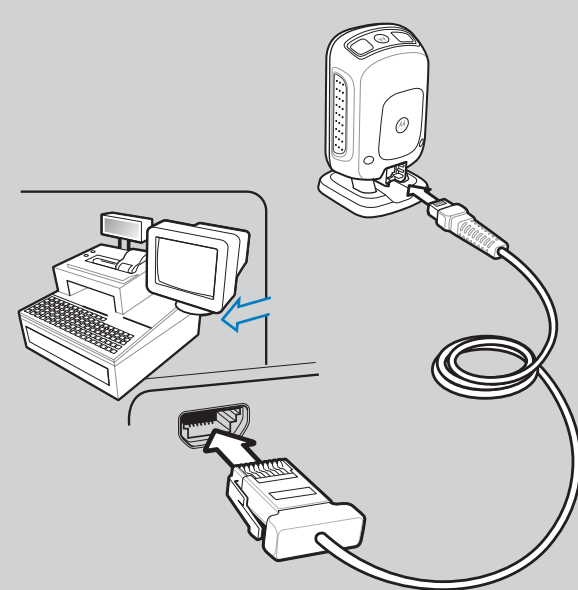

### TROUBLESHOOTING

#### Scanner not working

##### No power to scanner

Check system power; ensure power supply, if required, is connected

##### Incorrect interface cable used

Ensure that correct interface cable is used

##### Interface/power cables are loose

Ensure all cable connections are secure

#### Scanner not decoding bar code

##### Scanner not programmed for bar code type

Ensure scanner is programmed to read type of bar code being scanned

##### Bar code unreadable

Ensure bar code is not defaced; try scanning test bar code of same bar code type; ensure bar code is not defaced; try scanning test bar code of same bar code type

##### Distance between scanner and bar code incorrect

Move scanner closer to or further from bar code

#### Scanner decoding bar code, but data not transmitting to host

##### Scanner not programmed for correct host interface

Scan appropriate host parameter bar codes

##### Interface cable is loose

Ensure all cable connections are secure

#### Scanned data incorrectly displayed on host

##### Scanner not programmed for correct host interface

Scan appropriate host parameter bar codes

### DS9208 PROGRAMMING BAR CODES

#### Set Defaults



SET DEFAULTS

#### Enter Key (Carriage Return/Line Feed)



<DATA><SUFFIX 1>

#### IBM 46XX Host Types



PORT 5B



PORT 9B

#### USB Host Types



HID KEYBOARD EMULATION



SNAPI WITH IMAGING

#### Keyboard Wedge Host Types



IBM PC/AT and IBM PC COMPATIBLE



PORT 17

#### IBM HAND-HELD USB



IBM HAND-HELD USB



SNAPI WITHOUT IMAGING

#### Scan ONE of the following country types



NORTH AMERICAN



ITALIAN

#### RS-232 Host Types



STANDARD RS-232



NIXDORF RS-232 MODE B



FRENCH



SWEDISH



ICL RS-232



FUJITSU RS-232



FRENCH CANADIAN



UK ENGLISH



NIXDORF RS-232 MODE A



OPOS/JPOS



GERMAN



JAPANESE



SPANISH

POST IN WORK AREA





[www.L-TronDirect.com](http://www.L-TronDirect.com)

800-830-9523

[info@L-Tron.com](mailto:info@L-Tron.com)

596 Fishers Station Dr | Victor, NY | 14564 | Suite 1 A

[www.L-Tron.com](http://www.L-Tron.com)

