

Workabout Pro 4

Accessories Guide

Step 1:Choose the main Workabout Pro 4 variant





Workabout Pro 4

7528-L Workabout Pro 4 Long

• Windows CE 6.0

Windows Embedded Hand Held 6.5

7528-S Workabout Pro 4 Short- Numeric Workabout Pro 4 Short- Qwerty

• Windows CE 6.0

Windows Embedded Hand Held 6.5

Step 2:Choose a radio option

((())) Radio options



Radios

RA3051

HSPA+ WAN expansion module, compatible with Short and Long configurations, end-cap of choice is ordered separately.

RA3052

Diversity Wi-Fi / Stand alone GPS antenna module, compatible with Short and Long configurations, endcap of choice is ordered separately.



Data capture options

Slim Pod Engines

WA9015 SE965 1D Standard range laser

WA9017 SE655 1D Linear imager

WA9019 SE4500 2D Imager

Optional pistol grip

WA6003 Pistol grip attachment for slim pod





WA90151D Standard range laser



WA9017 1D Linear Imager



WA9019 2D Imager



All slim pods and pistol grip are compatible with short and long configurations



Data capture options

End-Cap Engines

WA9022 SE1524ER 1D Lorax extended range laser

WA9016 SE965 1D Standard range laser

WA9018 SE655 1D Linear imager

WA9020 SE4500 2D Imager

Optional pistol grip

WA6103

Pistol grip attachment kit. Includes flush mount pistol grip with trigger, and screws





When using WA9022 Lorax Laser end-cap with or without pistol grip, a trigger board WA9301 is required

For all other end-cap engines, a trigger board WA9302 is required **ONLY** when using the pistol grip.







WA9016
1D Standard Range Laser



WA9018
1D Linear Imager



WA9020 2D Imager



All end-cap scanners and pistol grip are compatible with short and long configurations



Data capture options

Trigger Boards

WA9301 Trigger board for SE1524-ER,1D Lorax

extended range laser end-cap.

WA9302 Trigger board for 1D standard range

laser or 1D/2D imager end-cap

Additional pistol grip

WA6103 Pistol grip attachment kit. Includes flush mount pistol grip with trigger, and screws





Trigger board WA9301 is always required when using WA9022 Lorax laser end-cap with or without pistol grip



WA9301 Trigger Board for Lorax Laser End-Cap



WA9302
Trigger Board for 1D Laser or
1D/2D Imager End-Cap

Trigger board WA9302 is required for 1D laser or 1D/2D imager **ONLY** when using the pistol grip





All trigger boards are compatible with short and long configurations

Other options

Back Cover and End-Cap Options

WA6208 Standard blank back-cover

WA6214 Standard blank end-cap, with stylus

WA6212 WAN/GPS/Wi-Fi diversity end-cap

WA6213 Multi-purpose end cap

WA9021 8.0 megapixel camera module

WA6215 Headset adapter end-cap

All covers and end-caps are compatible with short and long configurations





WA9021 8MP Camera Module



WA6216 Standard Blank Back-Cover



Ultra High Frequency (UHF)

WA9901 Linear antenna, FCC and IC certified

WA9902 Linear antenna, CE certified

WA9903 Circular antenna, FCC and IC certified*

WA9904 Circular antenna, IC certified*

All circular UHF antenna modules are installed to the WAP4 units as back-covers





High (HF) and Low Frequency (LF)

WA9905 HF module, FCC, IC and CE certified

WA9906 LF module



All RFID options are compatible with or without a WAN radio. Before choosing any combination, review the local country approval list.



Step 4:Choose a battery type



Spare Battery options

If you're changing battery types, a battery door is required when purchasing 3300 mAh or 4400 mAh batteries



2760 mAh Battery



WA3025 Spare battery, 2760 mAh

Compatible battery doors:



WA3015-G2
Battery door for long configurations



WA3016-G2
Battery door for **short** configurations

4400 mAh Battery



WA3010 Spare battery, 4400 mAh

Compatible battery doors:



WA3017-G2
Battery door for long configurations



WA3018-G2
Battery door for **short** configurations

Step 5:Choose a charging method

Cradle options



Single Slot Cradle:

WA4003-G2 Single slot USB cradle for short and

long configurations.

WA4003-AR Single slot USB cradle for short and

long configurations (Argentina).



The single slot cradle is compatible with the pistol grip, charges a spare battery and has USB master and slave connections.

The single slot cradle includes a power supply (PS1050-G1 or PS1050-AR for Argentina) with country adapters and a USB cable.





Step 5:Choose a charging method





Four Slot Cradle:

WA4204-G2 Four slot Ethernet cradle for all **long** configurations.

WA4304-G2 Four slot Ethernet cradle for all **short** configurations.

The four slot cradle includes a power supply (PS1055-G1). Must purchase specific country AC Line Cord.





AC Line Cords:

- 9008693 for North America
- 9008892 for Europe
- 9008950 for UK

Battery Charger



WA3004-G1 Four slot battery charger to be used with high and ultra high capacity batteries. Includes power supply (PS1056-G1). Must order AC line cord separately.


Step 5: Choose a charging method




Vehicle cradle:

WA1210-G2

 Vehicle cradle 12V, for use with long configurations



 Vehicle cradle 12V, for use with **short** configurations



RV3050

Vehicle charge cable, allows to charge directly any long or short configurations.





When using the vehicle cradle, the universal RAM mount is required (Order separately WA4006)





CA3002

CA1210

For powered connection, must order a power cable 9-20V input (CA1210) or the vehicle power outlet adapter cable (CA3002)



Optional Accessories



WA4005-G1

Port replicator connects serial devices to the vehicle cradle.



PS1350

Pre-regulator module, required when connecting the vehicle cradle to power sources above 20V to a maximum of 72V.



Step 6:Choose carrying accessories



Holsters

WA6083 Soft Holster and Belt for

use with all short and long configurations when using the pistol grip. Includes belt, tether (pistol grip to holster)

and leg strap.

WA6084

Nylon Pouch for use with all short and long configurations when using the pistol grip. The nylon pouch is not approved in FCC countries.

Carry Cases

WA6080 Standard carry case, for use with **long** configurations.

Includes belt clip.

WA6180 Standard Carry Case, for use with **short** configurations.

Includes belt clip.

WA6081 Carry case (open ended), for use with **long** configurations

while using end cap scanners and most RFID options.

WA6181 Carry case (open ended), for use with **short** configurations

while using end cap scanners and most RFID options.

Optional shoulder strap for carry cases

CV6021

Shoulder strap for use with all carry cases.



^{*} Note: Carry cases are not approved in FCC countries

Step 6: **Choose carrying accessories**



Rubber Boots

Rubber boot for use with long LAN **WA6400**

configurations with/without using

scanner pods/pistol grip

WA6402 Rubber boot for use with long

extended range laser configuration

with/without using pistol grip

Optional shoulder strap for rubber boots

CV6021 Shoulder strap for use with all rubber boots





Rubber Boot for Long **Extended Range Laser**

Step 6:Choose carrying accessories



Hand Straps

WA6025 Hand strap with mobile stylus (double

loop) for **long** configurations

WA6125 Hand strap with stylus (double loop) for

short configurations

Hand Straps include a tethered stylus



Miscellaneous

WA6100-G1 Replacement end cap stylus (pack of 5)

WA6310-G1 Mobile stylus with holder kit, includes

stylus, tether and holder

WA6113 Screen Protector (pack of 3)



WA6025
Hand Strap with Mobile Stylus



WA6310-G1
Mobile Stylus with Holder Kit

Step 7:Choose optional tether adapters



Tether Open-Ended Cable



CA2950-G1
Open ended cable with strain relief (150mm/ 6ft)

Tether to Dsub9 Cable



WA4020-G2

Cable tether, provides RS232 connectivity (Dsub9 connector) to any short and long configurations through the tether port.

Tether to USB A Cable



WA1002

Cable tether, provides USB A connectivity to any short and long configurations through the tether port. Supports USB peripherals. Not used for active sync.



www.L-TronDirect.com 800-830-9523 info@L-Tron.com

